


Vertical Walling Detail

Reconstructed Stone™ Wall Panels

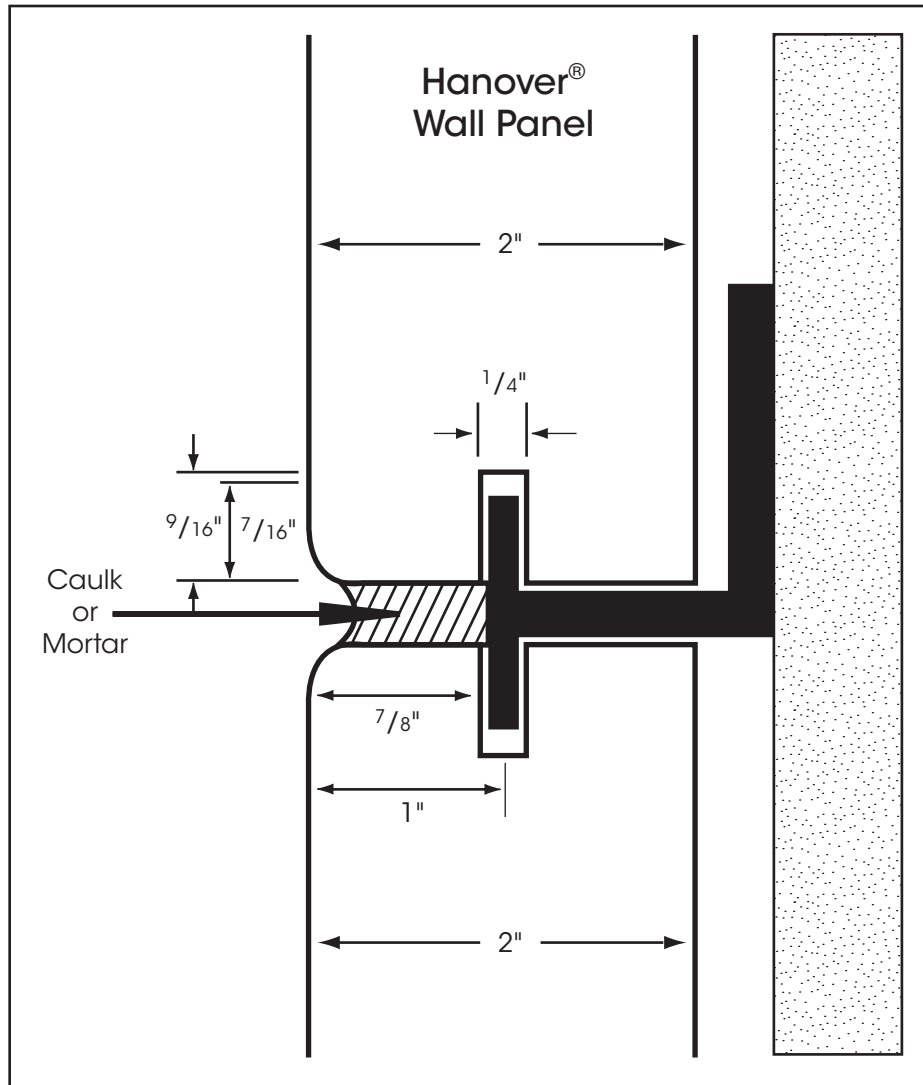

Please Note:

1. Critical dimension of saw cut is $7/8$ " from front of panel.
2. Depth of cut to $9/16$ "
3. Width of cut to be $1/4$ "
4. Saw cut to run on opposite side of panel as indicated by orders.

Wall Panels are available in a variety of sizes, colors and textures. Please request our brochure Vertical Wall Applications for more details.

HANOVER[®]
Architectural Products
5000 Hanover Road, Hanover, PA 17331
717.637.0500 fax 717.637.7145
www.hanoverpavers.com